

# Technical Note


## COVID-19: DISINFECTING RECOMMENDATIONS FOR DATALOGIC SCANNERS

To disinfect scanner surfaces, Datalogic recommends using one of the two following solutions:

- Isopropyl Alcohol (70% solution or above)
- Chlorine Bleach (8.25% solution) ½ cup bleach diluted in 1 gallon of water (3,78541 Liters)

Both options are recommended; cleaning procedure is detailed below.

Use a clean, paper towel dampened one of the above solutions to clean and disinfect scan window and exterior surfaces.

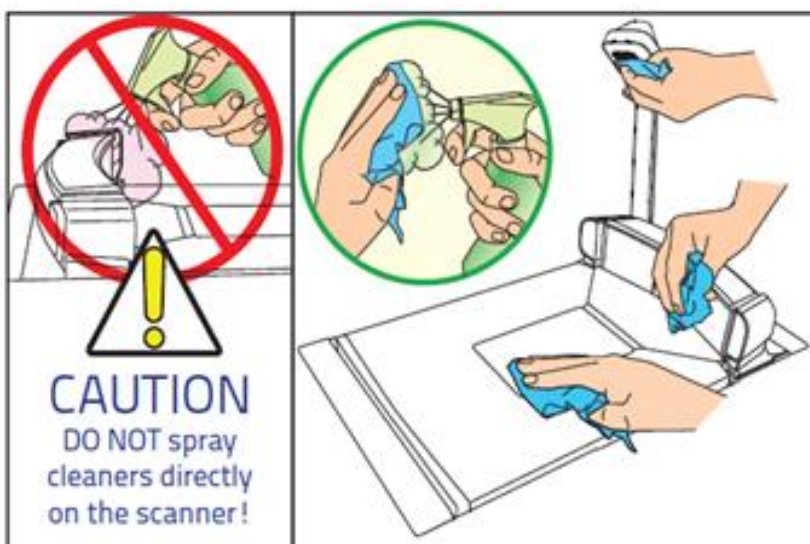

*DO NOT use abrasive cleaning agents or abrasive pads to clean this product. Harsh chemicals, disinfectants, and cleansers can cause damage which will adversely affect scanning and weighing performance.*